

Настройка роутера Asus-WL-520GC

Переходим в раздел **IP Config** выбираем **WAN & Lan**:

WAN Connection Type:	(2) PPPoE
Choose WAN Bridge Port:	None
WAN IP Setting	
Get IP automatically?	(3) <input checked="" type="radio"/> Yes <input type="radio"/> No
IP Address:	0.0.0.0
Subnet Mask:	0.0.0.0
Default Gateway:	0.0.0.0
WAN DNS Setting	
Get DNS Server automatically?	(4) <input checked="" type="radio"/> Yes <input type="radio"/> No
DNS Server1:	
DNS Server2:	
PPPoE, PPTP or L2TP Account	
User Name:	(5) Логин
Password:	Пароль
Idle Disconnect Time in seconds(option):	0 <input type="checkbox"/> Tx Only
MTU:	(6) 1492
MRU:	1492

1. **WAN Connection Type** - ставим PPPoE
2. **Get IP automatically?** - Yes
3. **Get DNS Server automatically?** - Yes
4. **User name** и **Password** - вводим логин и пароль по договору
5. Нажимаем **Finish** для сохранения настроек.

Переходим в раздел **Wireless** выбираем **Interface**:

SSID	(2) Имя сети
Channel	Auto
Wireless Mode	Auto <input type="checkbox"/> 54g Protection
Authentication Method	(3) WPA-Auto-Personal
WPA Encryption:	TKIP+AES
WPA Pre-Shared Key:	(4) Ключ сети
WEP Encryption:	None
Passphrase:	
WEP Key 1 (10 or 26 hex digits):	
WEP Key 2 (10 or 26 hex digits):	
WEP Key 3 (10 or 26 hex digits):	
WEP Key 4 (10 or 26 hex digits):	
Key Index:	2
Network Key Rotation Interval:	0
Restore Finish (5) Apply	

1. **SSID** – Вводим имя беспроводной сети.
2. **Authentication Method** устанавливаем WPA- Auto-Personal
3. **WPA Encryption** ставим TKIP+AES либо AES
4. **WPA-Pre-Shared Key** вводим ключ сети
5. Нажимаем **Finish** для сохранения настроек.